

LIOB-588 I/O Controller

Installation instructions

Instructions de montage


Instruzioni di montaggio


Montageanweisung

Instrucciones de montaje

Montagevoorschrift

Monteringsanvisning

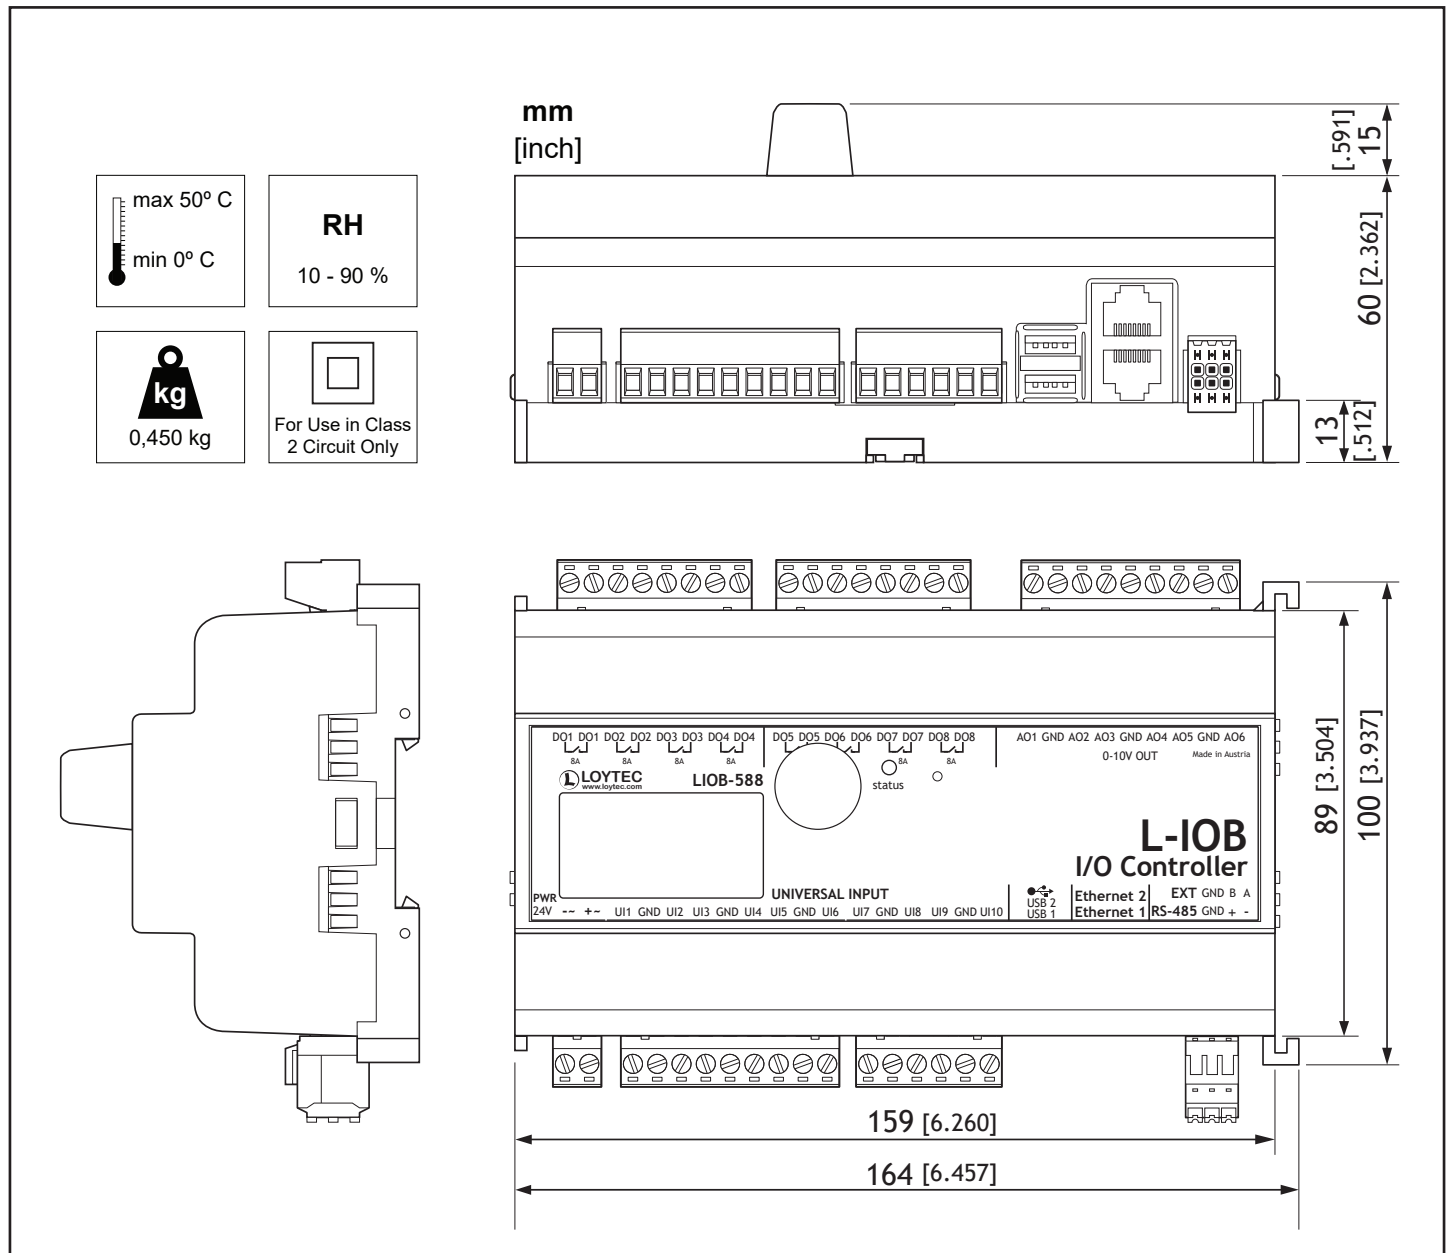

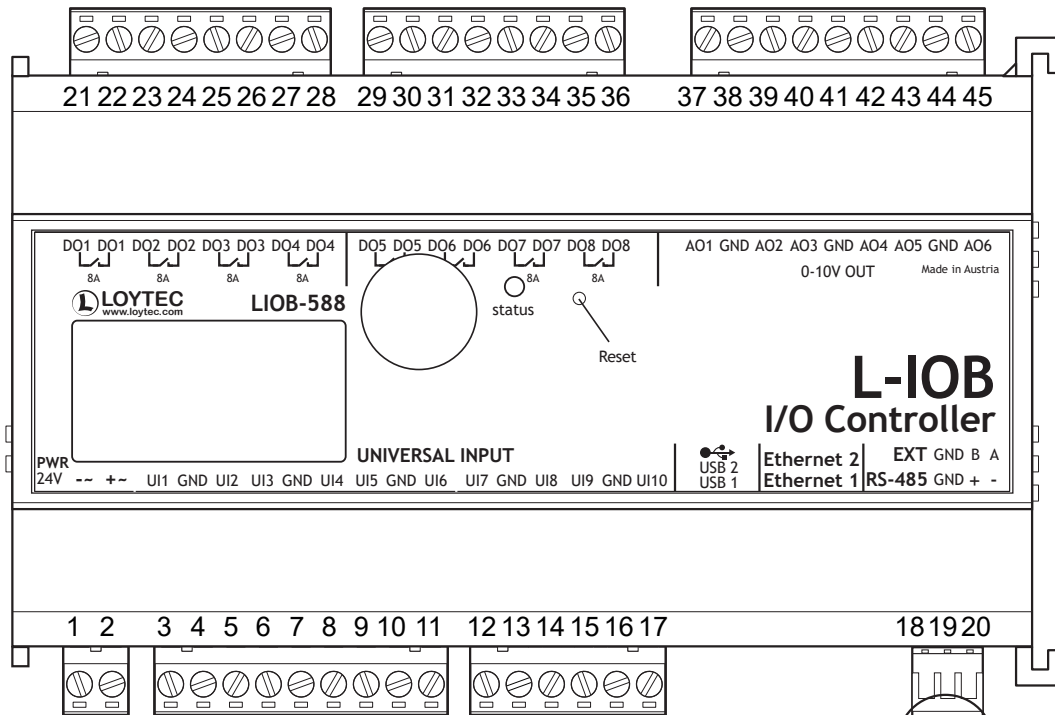

BUTTONS	
RESET DIAL	Reset Button Turn-and-Push Dial

STATUS LED	
OFF	Unconfigured
GREEN	In Operation
ORANGE	In Manual / Override mode
RED	Error
FLASHING	Traffic

CONNECTORS		
Input 24V	1	24 V MINUS or AC
PWR Supply	2	24 V PLUS or AC




Do not connect terminal 2 with ground!

UNIVERSAL INPUT		
	3	Input UI1
	4	Input GND
	5	Input UI2
	6	Input UI3
	7	Input GND
	8	Input UI4
	9	Input UI5
	10	Input GND
	11	Input UI6


License Notice: This product contains components covered by the GPL and LGPL.
Details on device Web UI or <http://loytec.com/os/>

Please update the firmware of the device first, see www.loytec.com/support/download

UNIVERSAL INPUT	12	Input UI7
	13	Input GND
	14	Input UI8
	15	Input UI9
	16	Input GND
EXT top row	18T	GND
	19T	B
	20T	A
RS485 bottom row	18B	GND
	19B	+
	20B	-
DIGITAL OUTPUT	21	DO1 } 8A
	22	DO1 } 8A
	23	DO2 } 8A
	24	DO2 } 8A
	25	DO3 } 8A
	26	DO3 } 8A
	27	DO4 } 8A
	28	DO4 } 8A
	29	DO5 } 8A
	30	DO5 } 8A
	31	DO6 } 8A
	32	DO6 } 8A
ANALOG OUTPUT	33	DO7 } 8A
	34	DO7 } 8A
	35	DO8 } 8A
	36	DO8 } 8A
	37	AO1
	38	GND
	39	AO2
	40	AO3
	41	GND
	42	AO4
	43	AO5
	44	GND
	45	AO6

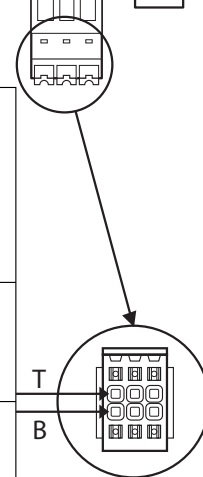


4.5 lb-in/0.5 Nm

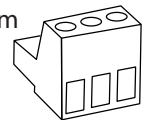


Weidmüller

 2 poles: BLZP 5.08/02/180
6 poles: BLZP 5.08/06/180
8 poles: BLZP 5.08/08/180
9 poles: BLZP 5.08/09/180
0.2 - 2.5 mm²



6 poles: B2CF 3.50/06/180

 
0.14 - 1.5 mm²
AWG26-AWG16




DHCP: ON

User: admin

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

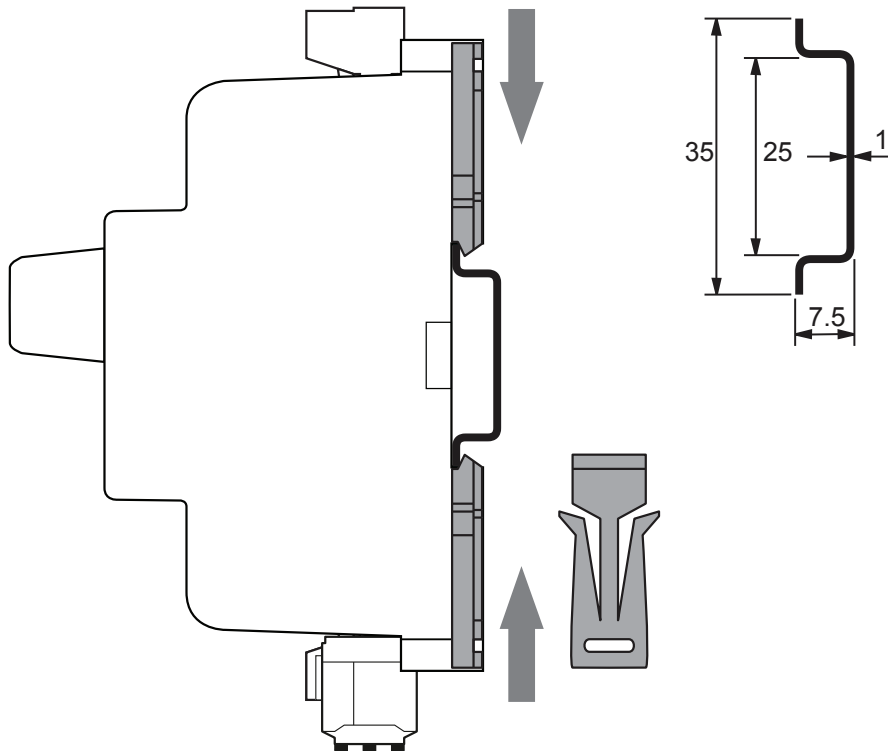

installation DIN rail 1.0

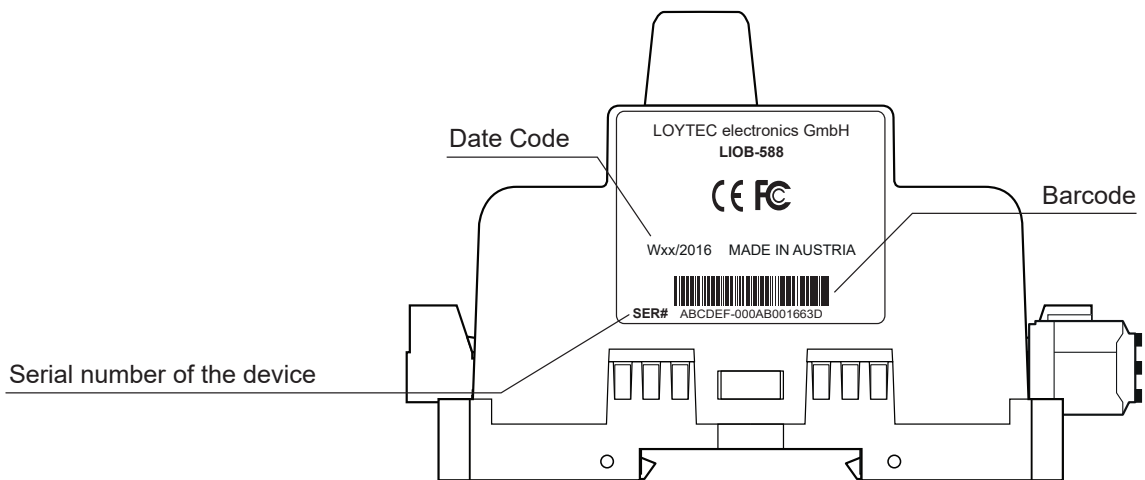

label 1.1

Document 88087701 Web edition
11/2016
Printed in Austria
Data is subject to change

 **LOYTEC**
A Delta Group Company
<http://www.loytec.com>
support@loytec.com